

# INSTRUCTION MANUAL

## T200 TRUE-SPRAY™

### TANNING SYSTEM

(Not Suitable for Continuous Use)

Page 4

· Tipping the Spray Gun causes the Spray Gun to clog. Dried spray material also clogs the pressure delivery tube and fittings. The Spray Gun does not function when clogging occurs.

· When not in use, be sure to disconnect the hose and place the Spray Gun into the holder in the turbine to avoid tipping.

#### GROUNDING INSTRUCTIONS

This product must be properly grounded. In the event of an electrical short circuit, grounding reduces the risk of electrical shock by providing an alternate path for the electrical current.

This product is equipped with a cord that has a ground wire and an appropriate ground plug. Plug the unit into an outlet that is properly installed and grounded in accordance with local codes and ordinances.

**IMPROPER INSTALLATION OF THE GROUND PLUG CAN RESULT IN THE RISK OF ELECTRICAL SHOCK. IF REPAIR OR REPLACEMENT OF THE PLUG OR CORD IS NECESSARY, DO NOT CONNECT THE GROUND WIRE TO EITHER FLAT BLADE TERMINAL. THE WIRE WITH GREEN INSULATION (WITH OR WITHOUT A YELLOW STRIPE) IS THE GROUNDING WIRE.**

1. For any question regarding proper installation of the ground plug, consult a qualified (licensed or certified) electrician.
2. Do not modify the plug provided. If the plug does not fit the outlet, have the proper outlet installed by a qualified electrician.
3. This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug in Figure 2. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapters should be used with this product.
4. If an extension cord is required, use only a three wire extension cord that has the same configuration as the unit cord, including the (round) ground terminal. Make sure that the extension cord is plugged into a properly grounded receptacle.
5. When using an extension cord, be sure it is in good condition and heavy enough to meet the specifications in the chart below. If an extension cord is needed the following wire sizes must be used.

6. (See Chart 1) Figure 2  
**25' cord.....10, 12, or 14 Gauge**  
**50' cord.....10 or 12 Gauge**  
**100' cord.....10 Gauge**

Chart 1 Extension Cord Requirements

PAGE 7

### 3 Prepare the T6000 Spray Gun Cont'd.

1. Follow the diagram to prepare the Spray Gun

a. Unscrew the plastic cup from the Spray Gun. Pour tanning solution into the cup. Do not fill more than  $\frac{3}{4}$  full.

b. Carefully screw the cup back onto the main body of the Spray Gun. Screw the cup on firmly but **DO NOT over tighten. Over tightening will cause the cup to “pop” and damage the threads. Leakage can then occur requiring replacement of the cup.**

c. Locate the air cap (#2) on the T6000 diagram. Slightly turn the air cap ring (#1) anti or counter clockwise

to loosen the air cap. Notice that you can now rotate the air cap freely.

d. Look at Mist Applicator Patterns diagram below. Note the position of the air cap and the direction of the spray pattern. Pattern 1 is for spraying across from side to side. Pattern 2 is for spraying up and down.

Pattern 3 will produce a spot or circle. Patterns 1 and 2 are the most common positions for applying tanning solutions.

e. Turn the air cap (#2) to the position you want. Turn the air cap ring (#1) clockwise to lock the air cap in place.

#### SPRAY GUN PATTERNS

1. Misting across from side to side

2. Misting up and down.

3. Misting in a spot or circle

Please note – we recommend using Spray Gun pattern 2.

**2. Next, position the T200 Tanning system as far away as practical and possible from the area where you will spray. (i.e. please put this sentence in bold)**

3. Attach the remaining end of the hose to the T6000 Spray Gun as follows:

d. Locate the coupler at the rear top of the T6000 Spray Gun. See T6000 diagram.

e. Pull back on the collar of the black connector on the air hose.

f. Push the connector over the coupler and release. Figure 7.

g. Your Spray Gun should now be firmly attached to the air hose.

#### 4 Adjusting the Spray Gun

a. Locate the Solution Flow Screw (#10) on the T6000 diagram.

**b. Turning the Solution Flow Screw clockwise reduces and will eventually stop the flow of solution. DO NOT over-tighten the screw as this will cause damage to the end of the needle. Once the trigger cannot be pulled back there is no point in tightening the screw down more, this will only damage the end of the needle. (bold)**

c. Turning the Solution Flow Screw anti or counter clockwise will increase the flow of solution.

d. In general, 1 ½ - 2 full turn from the fully closed position will provide a good solution flow. You may find

that you want more or less solution. You can adjust the Solution Flow Screw to your desired setting.

NOTE: Opening the Solution Flow Screw more than 3 turns will not increase the solution flow and will in

fact decrease the efficiency of your Spray Gun

e. In general, hold the T6000 Spray Gun **a hands width away (15-20cm)** from the person being sprayed. Moving the Spray Gun

back will increase the size of the spray pattern. Moving the Spray Gun closer will decrease the size of the

spray pattern. The further away you hold the Spray Gun, the more you will need to increase the solution

flow thus causing abnormal amounts of airborne solution (overspray).

f. Holding the Spray Gun closer to the person being sprayed along with a minimum flow of solution will provide the best results, no streaks or running solution and virtually no overspray in the spray area.

g. Be sure to move the Spray Gun at a slow, steady speed keeping the distance of the Spray Gun the same

throughout the application. This will ensure perfect results. It is actually very easy. Practice a few times

and you will be an expert.

h. It is best to hold the Spray Gun in a vertical position when spraying. If you want to change the direction of

the spray pattern, rotate the position of the air cap rather than turning the Spray Gun on its side.

i. Always hold or store the Spray Gun in a vertical position. A slot in the T200 Tanning system is provided

to hold and store the Spray Gun. It is a good habit to use it when you are not spraying.

j. Do not over-tighten the solution flow screw (#10) as this will damage the end of the needle point. Tighten

the screw until the needle cannot be pulled back. Once this point is reached there is no point in turning

the solution flow screw anymore as this will only cause damage to the needle point.

## 5 Spraying

- a. You are now ready to begin.
- b. The ON/OFF Switch is located under the carry handle of the T200 tanning system. Turn it on. You will hear a sound similar to a vacuum cleaner. You may also notice that air is now blowing out of the front of the Spray Gun. This is correct. Air will continually flow from the air cap of the Spray Gun as long as the T200 tanning system is running and the air hose is connected.
- c. Open the Solution Flow Screw as described in item 4.
- d. Set the spray pattern to position 2 by adjusting the air cap to the desired position. Refer to Mist Pattern Diagram
- e. Direct the Spray Gun to the area of the body that you want to start spraying.
- f. Pull back on the trigger (#13) and move the Spray Gun as noted in the diagram below. Do not wave the Spray Gun back and forth in front of your client by bending your wrist. Rather, keep your wrist straight and move your entire arm. Movement should be steady, even and deliberate, keeping your distance the same at all times.

### **PROPER SPRAYING TECHNIQUE**

Please note that the image on page 9 shows the gun at a 4 inch distance from the body. Please change this to “15-20cm – i.e. a hands width away”.

## 6 Maintenance

### 1 T200 Tanning System.

a. **The only maintenance necessary on the tanning system is cleaning and/or changing the filter element. The filter should be removed and rinsed out at least once daily or at least every 4 tanning sessions. The filter housing and filter are located on the underside of the T200 Tanning system.** (i.e. put in bold)

b. To clean the filter, turn the T200 Tanning system of its side. Using a small screwdriver insert the blade into

once of the filter housing slots, push down and out at the same time. (See Figure 1)

c. Turn the T200 Tanning system on the other side. Using the screwdriver insert the blade into the slot and

push down and out at the same time. (See Figure 2)

d. Using your thumb and index finger, pull the filter housing out. (See Figure 3)

e. Pull the filter out of the filter housing to clean. (See Figure 4 & 5)

Air Filter Fig 1 Fig 2

Fig 3 Fig 4 Fig 5

### 2 Air Hose.

a. Wipe the air hose daily with a damp cloth and store in a clean dry place.

### 3 Spray Gun

a. It is important to clean your Spray Gun daily **after use.**

b. At the end of the day or when the equipment will not be used any more, disconnect the Spray Gun from the air hose.

c. Carefully unscrew the cup. If there is remaining solution, either close the cup with a cup lid, or pour the

remaining solution into a proper storage container.

d. Rinse the cup under warm running water until clean.

## 6 Maintenance cont'd.

e. Fill the cup about ¼ full with water. Reconnect Spray Gun to Air Hose. Turn on the T200 Tanning system.

Direct the Spray Gun to a safe area and spray the clean warm water through the Spray Gun until the cup is empty.

f. Turn off the T200™ Tanning system. Disconnect the Spray Gun. Unscrew the cup.

g. Wipe all exposed areas dry.

h. Unscrew and remove the Air Cap Ring (#1). Rinse the threads under warm running water. Wipe, clean the threads and dry. Add a small amount of Spray Gun lube to the threads. **Do not use Vaseline**

i. Remove the Air Cap (#2). Rinse under warm running water. Wipe, clean and dry.

j. If necessary, remove Air Distributor Plate (#5). Rinse under warm running water. Wipe clean, dry and lubricate with Spray Gun lube.

k. Reinstall the three pieces you just removed by reversing the removal procedure. Your Spray Gun should be

ready for the next use. Store the Mist Applicator™ in the holder on the T200 Tanning system.

l. The Solution nozzle (#3) can be removed for additional cleaning if necessary. Be careful. There is a Solution

nozzle gasket (#4) around the threads of the Solution nozzle. Be sure to reinstall or leakage will occur.

Removal of the Solution nozzle is not necessary on a daily basis. You should however remove it once a

week and rinse under running water. The Solution nozzle can be easily removed with an adjustable wrench

or spanner. Place the tip of your adjustable wrench or spanner on the two flat areas of the nozzle and twist

anti or counter clockwise.

m. The Solution needle (#10) can also be removed for additional maintenance. To remove: Turn the Solution

Flow Screw anti or counter clockwise until it comes out of the Spray Gun. Be careful when removing the

Solution Flow Screw as there is a small spring (#9) around the needle. Do not lose it. This is important to the

operation of the Spray Gun. Set the spring aside and pull the trigger all the way back until you can grab the

needle with your finger tips and pull it out from the back of the Spray Gun. Once removed, rinse under warm

running water, Clean and dry. Reinstall reversing the removal procedure. NOTE: Occasionally it is necessary to lubricate the needle (#10) where it slides through the gland nut (#7). Simply rub a few drops of

Spray Gun lube around the needle shaft and reinsert into the back of the Spray Gun.

## 7 Troubleshooting

- a. T200 Tanning system turned ON. Air blows out of T6000 Spray Gun?
- b. This is correct. Air blows constantly when Tanning system is ON.
- c. T200 Tanning system turned ON. Unit does not operate or blow air?
- d. Check that the unit is plugged in to proper electric source. Be sure there is power at the electric source.
- e. If there is no problem with electric supply, call for technical support.
- f. T200 Tanning system is turned ON, the trigger is pulled back on Spray Gun, but no solution comes out?
- g. Check that the cup is screwed firmly to Spray Gun.
- h. Check that there is no solution bubbling or leaking around the cup.
- i. Turn T200 Tanning system OFF. Unscrew cup. Be sure that Solution Tube and Disc (#14) is connected and has not come loose. Locate the two small holes in the Disc around the Solution tube. Be sure that these two small holes are not clogged with dried solution. To clean, carefully insert a pin through each hole ensuring that they are clear.
- j. Turn T200 Tanning system OFF. Remove air cap ring, Remove air cap, Remove Air Distributor Plate. Remove Solution nozzle (#3) with an adjustable wrench or spanner. There is a Solution nozzle gasket (#4) on the Solution nozzle. Do not lose it. Rinse Solution Nozzle under running water and check for dried solution that may have blocked the hole. Reinstall Solution Nozzle Gasket. Reinstall Solution Nozzle, Air distributor plate, air cap and air cap ring. Try spraying again. If you still have a problem call for technical support.
- k. Solution leaks in front of trigger.
- l. With an adjustable wrench or spanner tighten Solution Needle Packing Screw (#7). Do not over tighten. This can cause Solution needle to stick and not spring back. Try spraying again. If leaking continues the Solution Needle Packing needs to be replaced. (Rare). Remove Solution Needle Packing Screw (#7). Pry out the Solution Needle Packings (4). Replace. Reinstall Solution Needle Packing Screw. Tighten all the way, and then back off slightly. (1/8 turn) Test spray gun for leakage. If you still have a problem call for technical support.
- m. When T200 Tanning system is ON, Solution continues to spray from Spray Gun without trigger being pulled.
- n. Immediately turn T200 Tanning system OFF.
- o. Disconnect spray gun from air hose.
- p. Slightly adjust (loosen) Solution Needle Packing Screw (#7). Test to see if problem is resolved.
- q. Check to see that Needle Spring is installed. (#9). Remove Solution Flow Screw (#10). Look for Needle Spring around the back of the Solution Needle. (See diagram). If lost, call for replacement.
- r. Check Solution nozzle. Remove and clean following directions 9.c.iv. above.
- s. Solution leaks around the top of the cup.
- t. Make sure the cup is screwed firmly to the body of the Spray Gun.
- u. Make sure the threads around the cup are clean and the threads inside the cup top assembly are clean.
- v. Replace the cup top gasket. Pry out old gasket. Install new gasket. Test spray gun.

13

## 8 Warranty and Technical Support

If you have technical questions please call Sienna X at 0333 600 1200.

Technical Support: Available Monday-Friday, 9am-5:30pm.

For spraying technique visit [www.sienna-x.co.uk/](http://www.sienna-x.co.uk/)

**Sienna X**

Unit B Sherriff Street Commercial Complex

Sherriff Street

Worcester

WR4 9AB

Email: [sales@sienna-x.co.uk](mailto:sales@sienna-x.co.uk)

**Apollo Sprayers International, Inc./Sienna X  
1-Year Limited Warranty**

This machine and Equipment is WARRANTED by **APOLLO SPRAYERS INTERNATIONAL INC./Sienna X** for a total period of ONE YEAR from the ORIGINAL date of purchase by the ORIGINAL PURCHASER. Proof of purchase to be included and all SHIPPING CHARGES to be pre-paid.

**APOLLO SPRAYERS INTERNATIONAL, INC./Sienna X** upon examination of the machine/equipment will **replace or repair** at their discretion any defects in material or workmanship.

This WARRANTY does NOT include: miss-use, damage, neglect, alterations, disassembled equipment or modifications, lack of maintenance, cleaning, water damage to electrical parts and INCORRECT VOLTAGE CONNECTION. This

WARRANTY is in lieu of all other express warranties, any WARRANTY implied by law, including but not limited to implied

warranties of merchantability or fitness, is excluded to the maximum extent permitted by law and, if not excludable, it is

limited to the duration of the express Warranty. No representative or person is authorized to extend this Warranty or to

create for **APOLLO SPRAYERS INTERNATIONAL, INC./Sienna X** any other liability in connection with the sale of any

**APOLLO SPRAYERS/Sienna X product. APOLLO SPRAYERS INTERNATIONAL, INC./Sienna X** shall not be liable

for any consequential, incidental, or special damages of any kind directly or indirectly resulting from breach of any express

or implied Warranty. Some States/countries do allow the exclusion of limitation of incidental or consequential damages or

limitations on the length of any Warranty so that the above limitations and exclusions may not apply to you; however, to

the maximum extent permitted under applicable law, the only rights and remedies shall be to obtain a replacement for any

defective product. This Warranty gives you specific legal rights and you may also have other rights which vary from state

to state and country to country.