

Instructions Manual

Maxi Cozy HT

WKE035.4.Axx.HT

Electric Beauty Bed

VERSION 1.25

1.Welcome!

Congratulations on purchasing this new electric beauty bed.

To ensure your proper use of the WKE035.4.Axx.HT Beauty Chair, please read this manual.

The illustrations used in this manual are intended to illustrate the product's operation.


Please keep this manual properly for future reference.


2.Warnings and precautions

- Never under any circumstances attempt to open or inspect the internal components of the bed. If an inspection becomes necessary, please contact your supplier or a suitably competent technician.
- Never use the bed in humid or poorly ventilated environments, such as wet rooms, bathrooms etc. to prevent damage to the electrical components. Any prolonged exposure to high moisture conditions may affect the electrical components and may result in failure.
- Never use the unit outdoors; exposure to the elements can cause damage.
- If the power cord was destroyed, please ask a professional to service and replace it to avoid hazards or contact the dealer for service.
- The maximum allowed lifting limit is around 180 kg. Do not exceed this weight.
- Always ensure that the bed is used within the correct electrical voltage range. Unless otherwise requested, beds are manufactured 220-240v rated and should be used with the same rated supply.
- When the bed is placed for use, always ensure that the power cord is in such a way, that it will not get caught in the moving parts or jammed under the bed or any other little piece of furniture nearby.
- Children are not allowed to use the bed or be near the equipment while it is on use. Do not leave children unsupervised near the bed.
- Always take care to avoid anyone sitting on the head or leg parts of the bed since this will cause damage to the bed and its electronic, hydraulic and mechanical functions.
- When lifting your bed for moving it, always lift by the metal frame beneath the casing at each side. Unplug it prior to any movement. 2 or more persons should move the bed due to its size and weight.

3.Product specifications

1. **Effortless Adjustment:** The backrest and seat cushion of the Aesthetic Beauty Chair are easily adjustable using the side Effortless Button, allowing for convenient customer position adjustments during operation.
2. **Comprehensive Composition:** The chair is composed of a four-control program controller, motors, hardware, and leather. The controller is designed to connect with a manual control board and four motors.
3. **Integrated Functionality:** It includes four sections: backrest angle control, seat cushion angle control, leg-pad angle control, and bed height adjustment, all integrated into a unified structure.
4. **User-Friendly Design:** The chair boasts a sleek and user-friendly design, ensuring simple operation and comfortable use, enhancing the overall experience and adding enjoyment to your life.
5. **Strong Stability:** The bed offers strong stability and high safety, with no noticeable shaking at any angle or height.

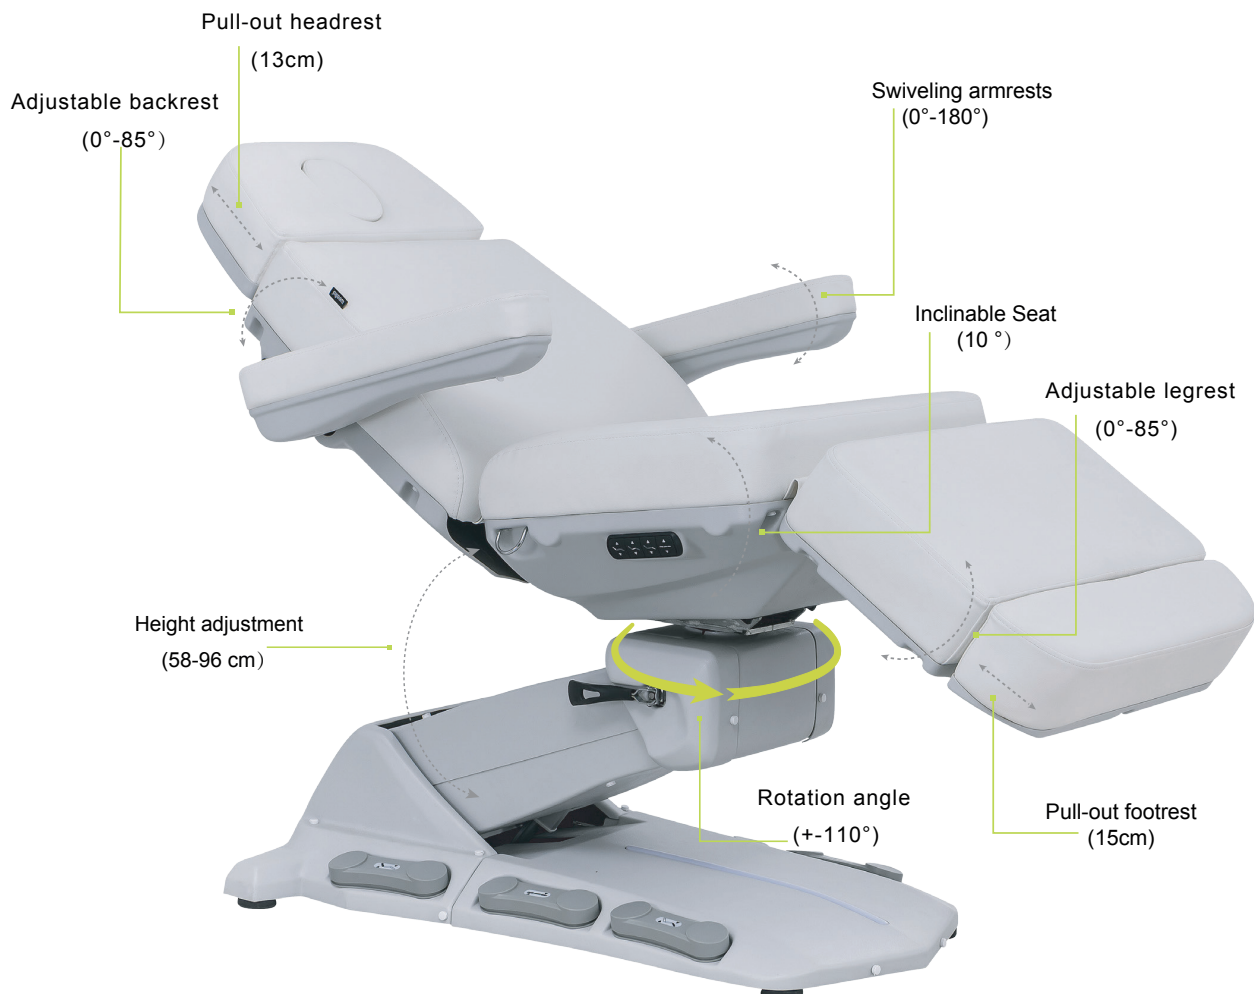

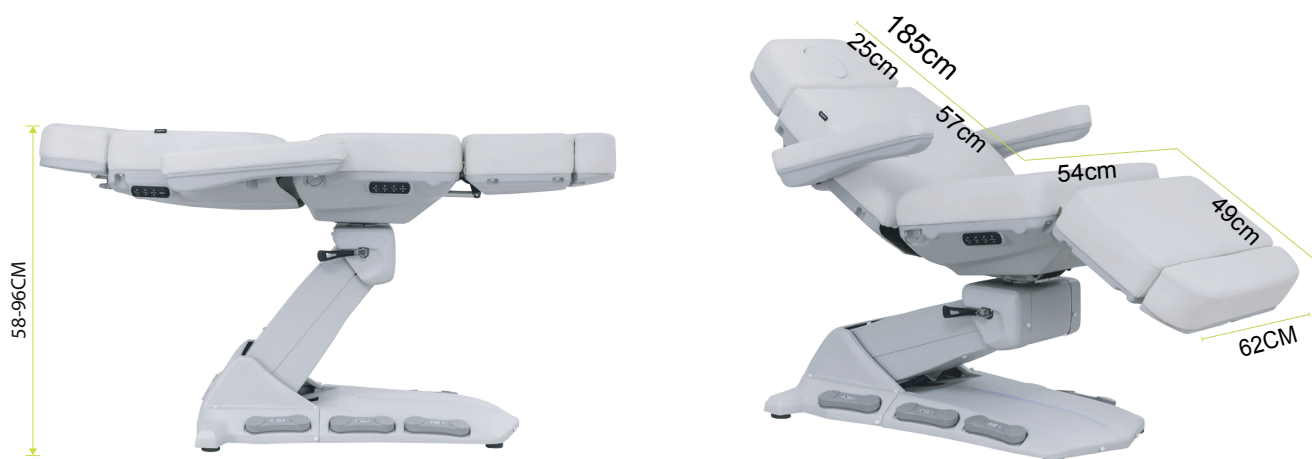

Product size: 1850 x 620 x 580-960mm

Backrest angle: 85°

Seat inclination angle: 10°

Footrest angle: 85°

Rotation angle: 110°

Net Weight: 83Kg

Gross Weight: 99Kg

Maximum load: 200Kg

Power: AC 220-240V, 50/60Hz 2A

Maximum Power: 300W

2 Levels heating and 1h auto-stop*

(L: 27-30°C; H: 34-40°C

-Depends on the room temperature)


*The heating will act like a thermostat during this 1h ON time. If it reaches max temp. will stop automatically and turn ON again when it start to drop again.

4.Operation


The "Effortless Button" refers to the buttons on the backrest and the side of the seat cushion, allowing you to easily and comfortably adjust your preferred working posture with a simple touch, making it the ideal companion for beauticians.

This feature is designed to ensure a seamless adjustment experience, enhancing both comfort and efficiency in your professional settings.

1.Cushion cover buttons:

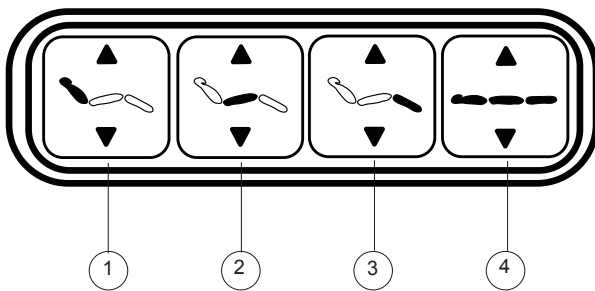

2. Backrestcover buttons:

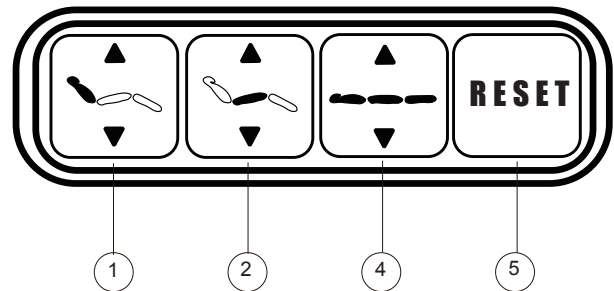

HOW TO USE:


 
1-Backrest Adjustmet:

Press to adjust the inclination of backrest, as shown in the figure:




2-Seat inclination Adjustmet:

Press to adjust the inclination of seat, as shown in the figure:

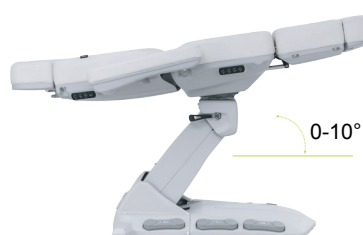

3- Legrest Adjustmet:

 Press to adjust the inclination of the legrest, as shown in the figure:



4- Height Adjustmet:

Press to adjust the rise or fall of the bed, as shown in the figure:



5- Armrest Adjustmet:

Move the handrail back and forth through a full 180-degree range:




6- Adjust the Bed Rotation:

To rotate the chair, pull out the adjustment handle to enable a 110-degree rotation to the left and right. - Once the desired angle is reached, push the handle back in to securely lock the bed in place.



Hand controller:

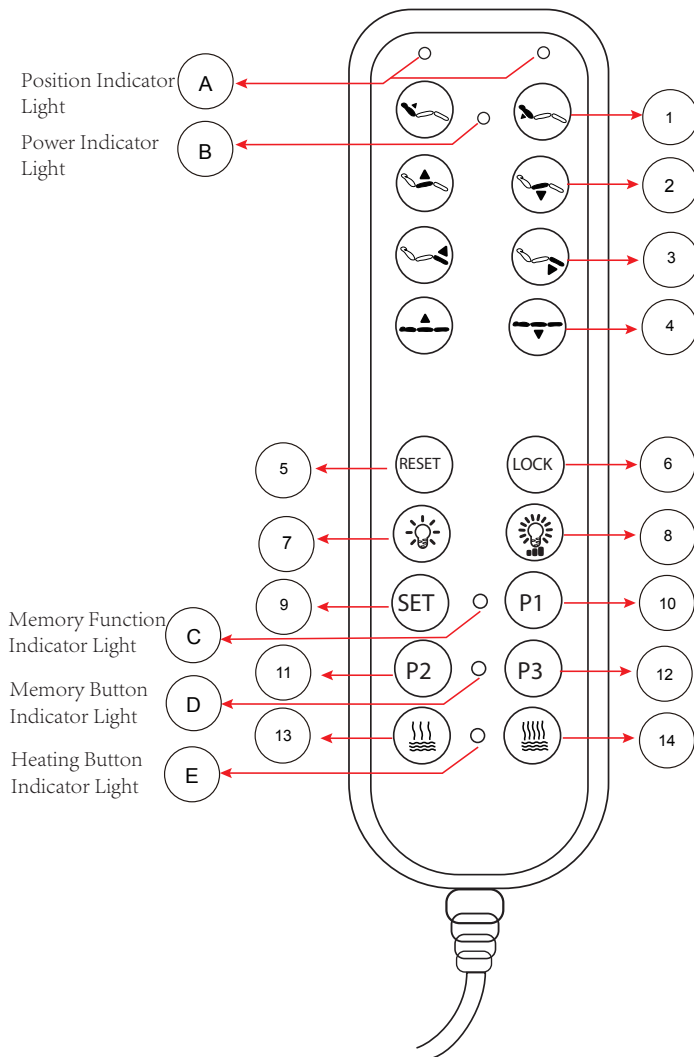


Tip: All buttons on the device will flash during initial startup, indicating a locked state. Press the **LOCK** button to unlock then all buttons will stop flashing and the **B** light will remain on.

- 1 Press or button to control the lifting angle of the backrest of the spa chair.
- 2 Press or button to control the tilting angle of the cushion of the spa chair.
- 3 Press or button to control the lifting angle of the footrest of the spa chair.
- 4 Press or button to control the rising or lowering of the whole spa chair.
- 5 Press and hold the **RESET** button for 3 seconds to reset motor. The backrest will automatically move to the maximum; the height of the whole chair will be lower to the greatest extent; the cushion will automatically move to the maximum; and the leg-pad will move to the minimum.

- 6 In the active state, press the **LOCK** button to secure the system, disabling all buttons. To reactivate the buttons, press **LOCK** again while in the locked state.
- 7 Press the button to active and change the color of the ambient light. It will turn off after the last cycle.
- 8 Press the button to adjust the brightness of the ambient light.
- 9 Hold the **SET** button 3 seconds to active position recoding and the Memory Function Indicator Light **C** will stay on 3 seconds for recoding. If you press the **P1** key, the current position of the actuator will be memorized as position 1. Other number keys have the same function.
- 10 Hold the **P1** button for 3 seconds, it will automatically move to position 1 which has been memorized, and you can press any button to quit this mode and stop the actuator operation.
- 11 Hold the **P2** button for 3 seconds, it will automatically move to position 2 which has been memorized, and you can press any button to quit this mode and stop the actuator operation.
- 12 Hold the **P3** button for 3 seconds, it will automatically move to position 3 which has been memorized, and you can press any button to quit this mode and stop the actuator operation.
- 13 Press the button to Activate the low-temperature heating function.
- 14 Press the button to Activate the High-temperature heating function.


Headrest:

To assemble the headrest, tighten the 4 screws following the drawing instructions below. All the parts and screws come with the bed packaging.

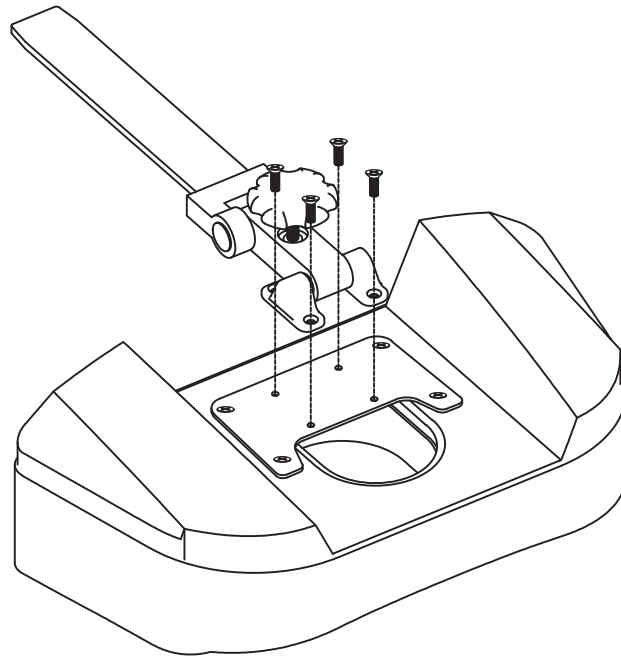



Switch Panel:


1. Ensure the power cord and hand controller are properly inserted in the correct direction and locked as indicated by the arrow.
2. Turn on the power switch; the indicator should be steadily lit.
3. If the device shows no response, turn off the power, open the fuse box, check the fuse, and replace it if necessary.

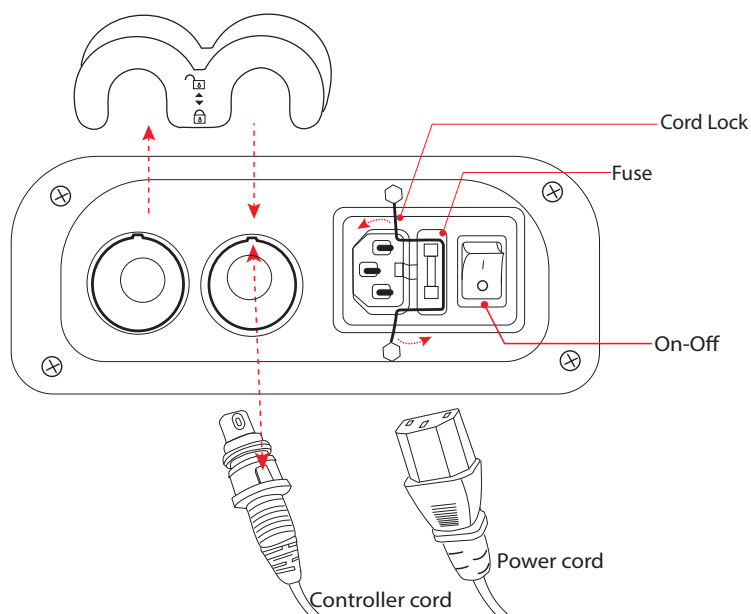

Advanced Foot Pedal:

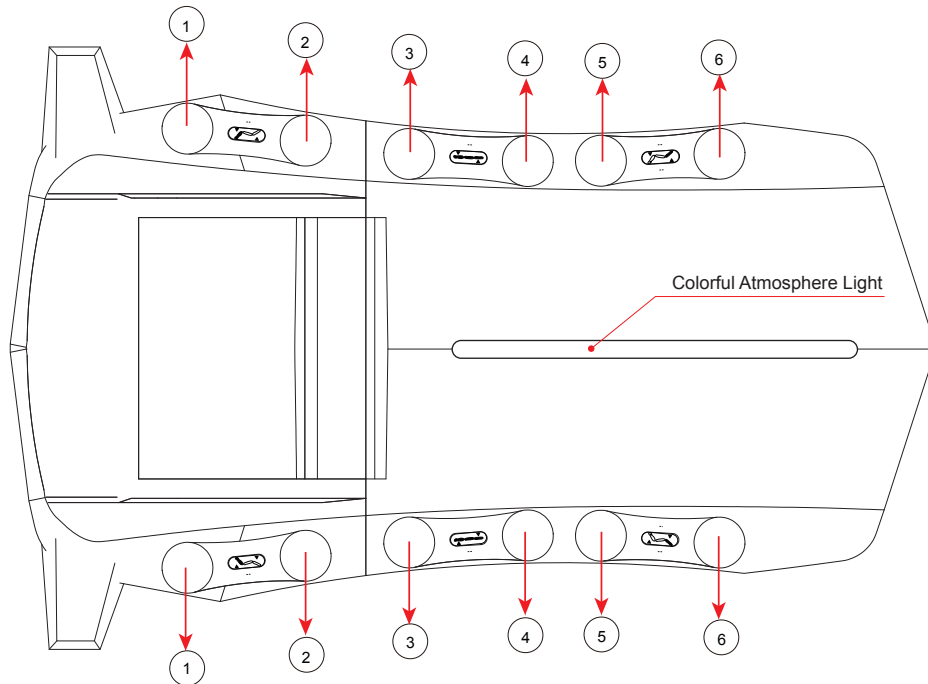

 1. Step on foot pedal  to control the lifting angle of the backrest of the spa chair. (1) control the backrest up (2) control the backrest down.

2. Step on foot pedal  to the rising or lowering of the whole spa chair. (3) control the chair rising (4) control the chair lowering.

3. Step on foot pedal  to control the lifting angle of the footrest of the spa chair. (5) control the footrest up (6) control the footrest down.

5.Maintenance

1. Daily Cleaning:

- Gently wipe away dust from the product surface using a soft, dry cloth.

2. Stain Removal:

- For stubborn dirt that won't come off with a regular dry cloth, use a soft towel dampened with a diluted neutral cleaner. After cleaning, dry the area thoroughly with a clean, dry cloth.

3. Avoid Solvents:

- Refrain from using solvents such as benzene, thinners, or gasoline, as these can damage the product's leather or erode the surface of the product casing.

4. Storage and Usage Conditions:

- Keep the product out of direct sunlight and humid environments to prevent damage.
- The product is designed to operate in temperatures ranging from -5° C to +50° C and at a relative humidity of 45% to 85%.

5. Routine Maintenance:

- Regularly lubricate moving parts (annually) to ensure smooth operation and prolong the product's lifespan.

Please adhere to these maintenance tips to maintain the product's performance and appearance over time.

6.Troubleshooting

Please try the following fault diagnoses and eliminating operations if you find a fault in your using this product.

| Phenomenon | Diagnosis | Eliminating Operations |
|---|---|---|
| Press the control key but nothing happens to the bed | 1.The function of the pressed control key has been switched to the extremity; 2.Whether the power plug is properly inserted; 3. Whether all connecting plugs of the transformer are inserted properly; 4.Quality problem of manual control board. | 1.Try to press other control keys; 2.Unplug the power plug and replug it; 3.Unplug and replug; 4.Replace the manual control panel. |
| Abnormal sound and shaking during the lifting and lowering of the chair | 1.The screws are loose 2.All the rotational components are lacking of lubricating oil 3.Quality problem of motor | 1.Tighten all screws 2. Add some lubricant 3.Replace the motor |



Imported by
WEEKO BARCELONA SL

Pol. Ind. La Valldan
Camí de Garreta, 92
08600 Berga
Barcelona - Spain
T. +34 93 824 90 20
E. info@weelko.com