

Instructions Manual

Nuuna Care 4

NU93.x.4.A26.xx

Electric Beauty Bed

VERSION 10.25

nuuna

1.Welcome!

Congratulations on purchasing this new beauty bed! This manual is only for reference of using and operating this electric beauty chair. Our company does not assume all the consequences and responsibilities caused by using it for other purposes.

Please read the manual carefully. By following these instructions you'll avoid usage problems.

Some texts and/or illustrations may not belong to your bed since they are general and it depends on your product choice at the purchasing time.

2.Warranty

The warranty period is effective on the date of purchase of the treatment table for a period specified in the seller's datasheet. It covers all the components of the treatment table under the normal and correct use. It also covers defects in workmanship from factory.

The above-mentioned warranty does not cover defects or malfunction caused by:

- Misuse, abuse or improper maintenance of the table and its upholstery;
- Non-observance of the precautions and warnings stated in this instruction manual;
- Lack of maintenance or repair tasks carried out by non-qualified service personnel who are unauthorized by the manufacturer;
- Wrong and faulty electrical installations or which do not fulfil the legal requirements;
- Our company is not liable for incidental or consequential damage to property or business.

 
 
 
 


Imported by
WEELKO BARCELONA SL
Pol. Ind. La Vallan
Camí de Garreta, 92
08600 Berga
Barcelona - Spain
T. +34 93 824 90 20
E. info@weelko.com

3.Warnings and precautions

- Never under any circumstances attempt to open or inspect the internal components of the bed. If an inspection becomes necessary, please contact your supplier or a suitably competent technician.
- Never use the bed in humid or poorly ventilated environments, such as wet rooms, bathrooms etc. to prevent damage to the electrical components. Any prolonged exposure to high moisture conditions may affect the electrical components and may result in failure.
- Never use the unit outdoors; exposure to the elements can cause damage.
- If the power cord was destroyed, please ask a professional to service and replace it to avoid hazards or contact the dealer for service.
- The maximum allowed lifting limit is around 180 kg. Do not exceed this weight.
- Always ensure that the bed is used within the correct electrical voltage range. Unless otherwise requested, beds are manufactured 220-240v rated and should be used with the same rated supply.
- When the bed is placed for use, always ensure that the power cord is in such a way, that it will not get caught in the moving parts or jammed under the bed or any other little piece of furniture nearby.
- Children are not allowed to use the bed or be near the equipment while it is on use. Do not leave children unsupervised near the bed.
- Always take care to avoid anyone sitting on the head or leg parts of the bed since this will cause damage to the bed and its electronic, hydraulic and mechanical functions.
- When lifting your bed for moving it, always lift by the metal frame beneath the casing at each side. Unplug it prior to any movement. 2 or more persons should move the bed due to its size and weight.

4.Product specifications

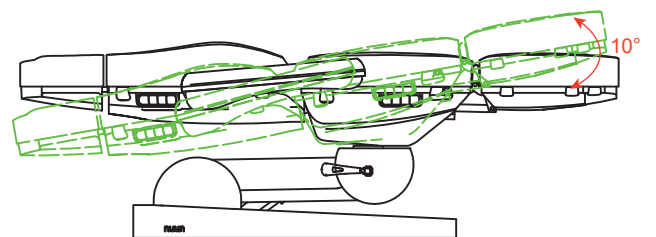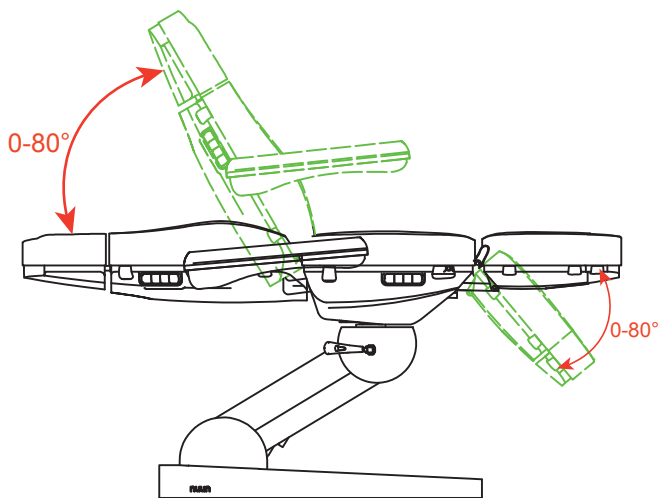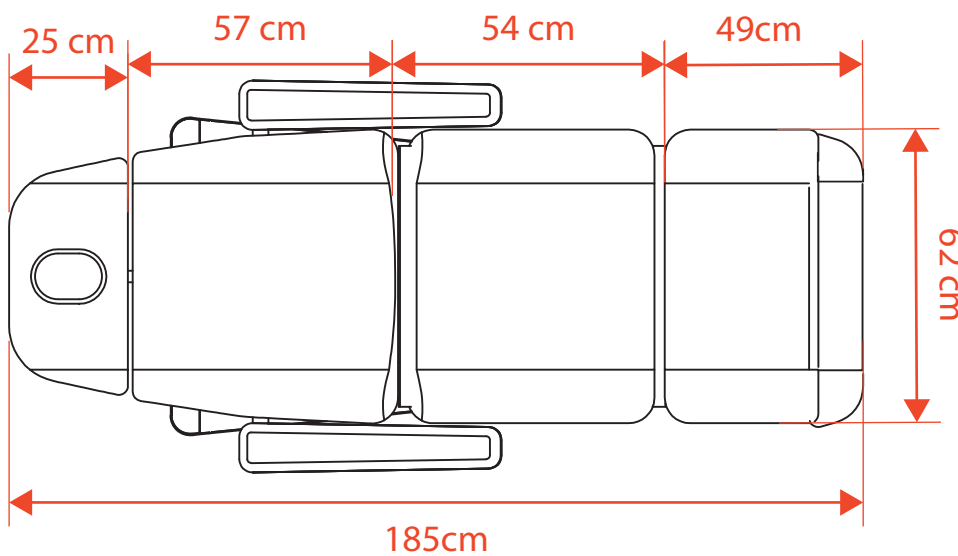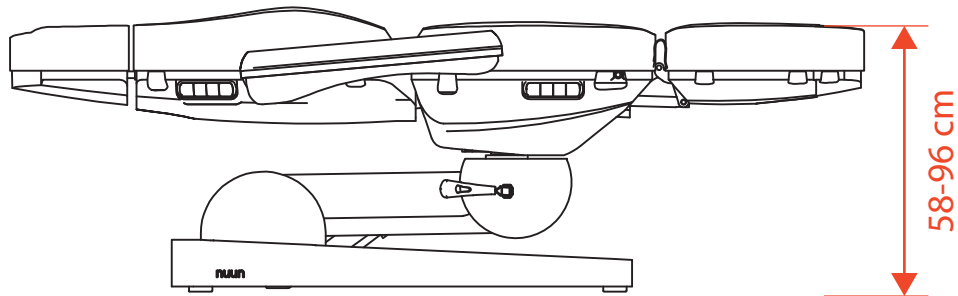


	Nuuna Care 4	Nuuna Care 4 Plus	Nuuna Care 4 Plus HT
Product size	185 x 62 x 58/96 cm	185 x 62 x 58/96 cm	185 x 62 x 58/96 cm
Backrest angle	0-80°	0-80°	0-80°
Seat inc. angle	0-10°	0-10°	0-10°
Footrest angle	0-80°	0-80°	0-80°
Net weight	100 kg	100 kg	100 kg
Gross weight	110 kg	110 kg	110 kg
Max. load. weight	180 kg	180 kg	180 kg
Power	AC 220-240V, 50/60 Hz	AC 220-240V, 50/60 Hz	AC 220-240V, 50/60 Hz
Max. power	300 W	300 W	300 W
Rotation	No	Yes	Yes
Heating	No	No	Yes

  
5.Operation





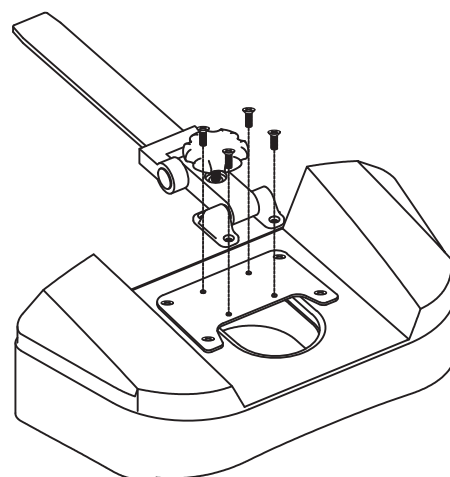

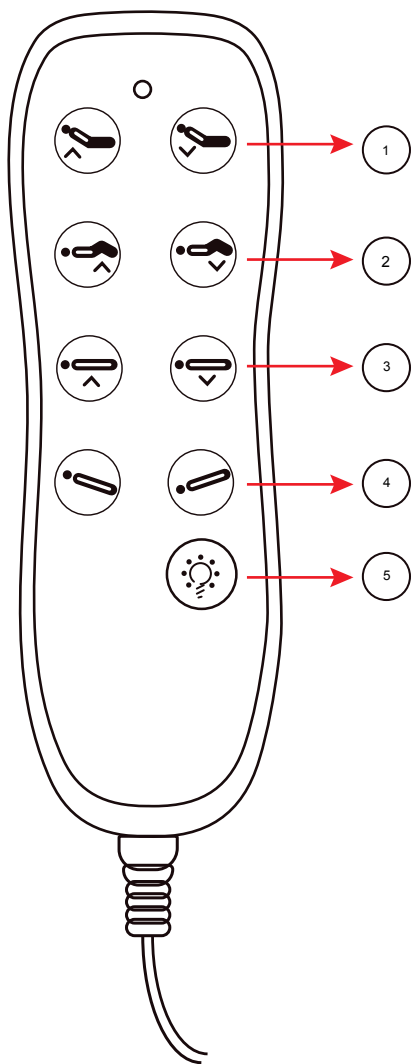


Headrest:

To assemble the headrest, tighten the 4 screws following the drawing instructions below.
All the parts and screws come with the bed packaging.

 










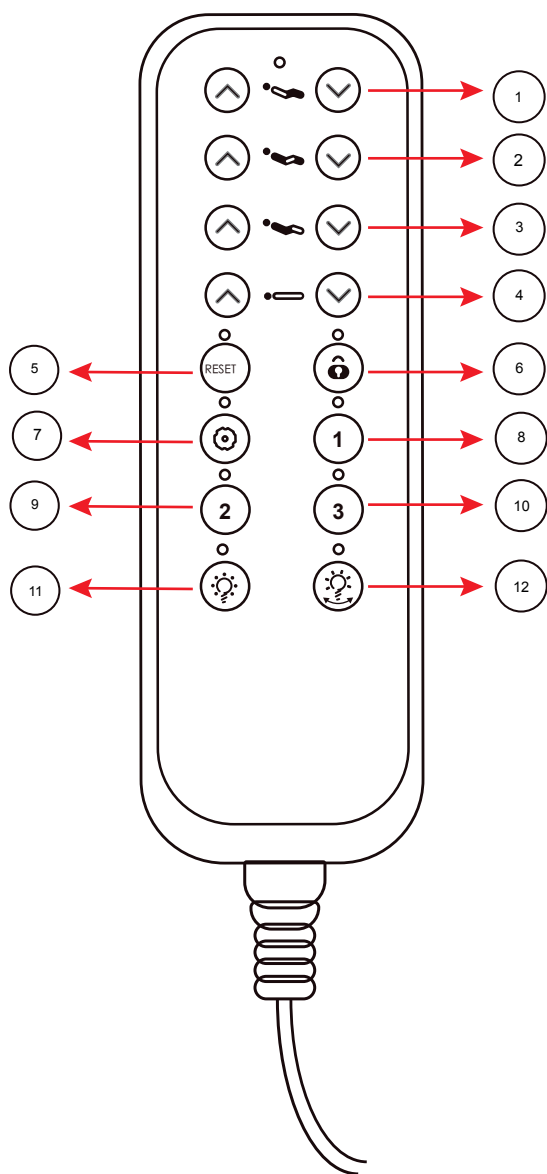




Nuuna Care 4:



 
- 1 Press  or  button to control the inclination angle of the backrest of the beauty chair.
- 2 Press  or  button to control the inclination angle of the legrest of the beauty chair.
- 3 Press  or  button to control the height of the beauty chair.
- 4 Press  or  button to control the inclination angle of the seat of the beauty chair.
- 5 Press  button to activate the light.
It will turn OFF after pressing again.

Nuuna Care 4 Plus:




- 1 Press  button to control the backrest angle.
- 2 Press  button to control the tilting angle.
- 3 Press  button to control the legrest angle.
- 4 Press  button to control the height.
- 5 Press and hold the  button for 3 seconds to reset motor. The backrest will automatically move to the maximum; the height of the whole chair will be lower to the greatest extent; the cushion will automatically move to the maximum; and the leg pad will move to the minimum.
- 6 In the active state, press the  lock button to secure the system, disabling all buttons. To reactivate the buttons, press it again while in the locked state.
- 7 Hold the  button 3 seconds to active position recoding and the Memory Function Indicator Light will stay on 3 seconds for recoding. If you press the  key, the current position of the actuator will be memorized as position 1. Other number keys have the same function.
- 8 Hold the  button for 3 seconds, it will automatically move to position 1 which has been memorized, and you can press any button to quit this mode and stop the actuator operation.
- 9 Hold the  button for 3 seconds, it will automatically move to position 2 which has been memorized, and you can press any button to quit this mode and stop the actuator operation.
- 10 Hold the  button for 3 seconds, it will automatically move to position 3 which has been memorized, and you can press any button to quit this mode and stop the actuator operation.
- 11 Press the  button to active the light. It will turn OFF after press again.
- 12 Press the  button to adjust the brightness of the light.


Backrest button

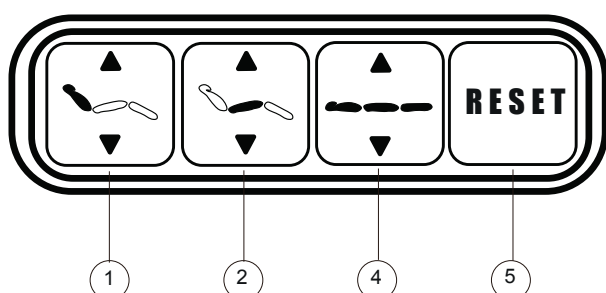

Seatrest button

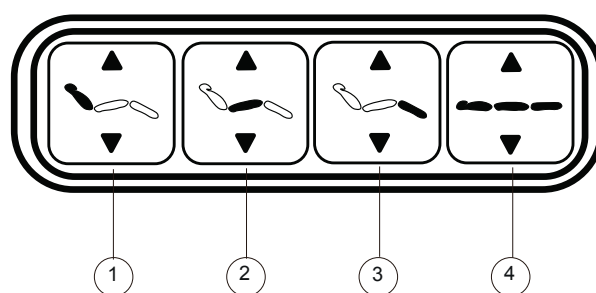 


Nuuna Care 4 Plus HT:

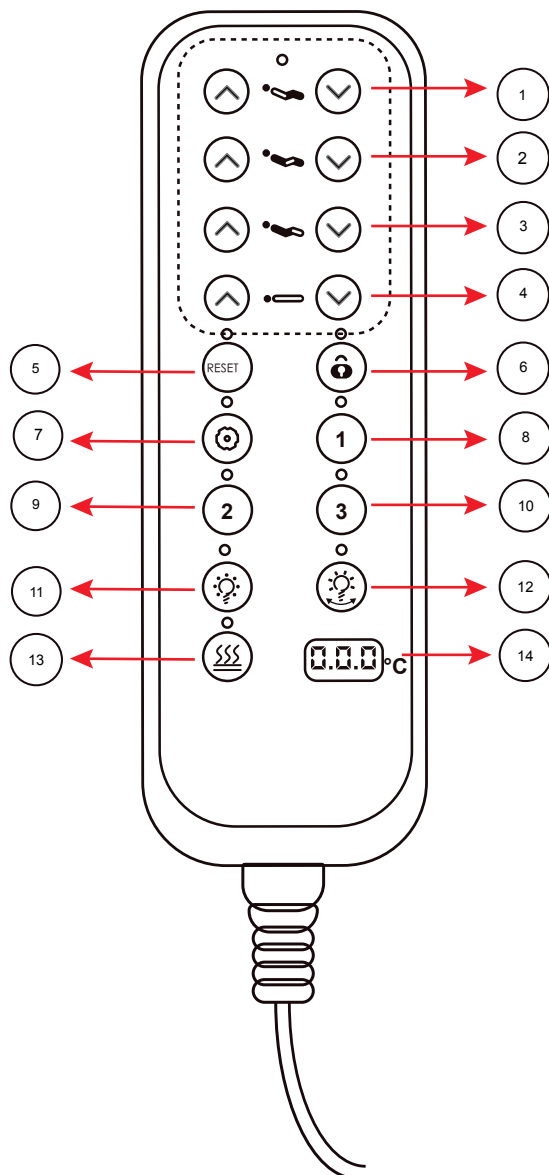 


- 1 Press button to control the backrest angle.
- 2 Press button to control the tilting angle.
- 3 Press button to control the legrest angle.
- 4 Press button to control the height.
- 5 Press and hold the button for 3 seconds to reset motor. The backrest will automatically move to the maximum; the height of the whole chair will be lower to the greatest extent; the cushion will automatically move to the maximum; and the leg pad will move to the minimum.
- 6 In the active state, press the lock button to secure the system, disabling all buttons. To reactivate the buttons, press it again while in the locked state.
- 7 Hold the button 3 seconds to active position recoding and the Memory Function Indicator Light will stay on 3 seconds for recoding. If you press the key, the current position of the actuator will be memorized as position 1. Other number keys have the same function.
- 8 Hold the button for 3 seconds, it will automatically move to position 1 which has been memorized, and you can press any button to quit this mode and stop the actuator operation.
- 9 Hold the button for 3 seconds, it will automatically move to position 2 which has been memorized, and you can press any button to quit this mode and stop the actuator operation.
- 10 Hold the button for 3 seconds, it will automatically move to position 3 which has been memorized, and you can press any button to quit this mode and stop the actuator operation.
- 11 Press the button to active the light. It will turn OFF after press again.
- 12 Press the button to adjust the brightness of the light.
- 13 Press the button to activate the temperature heating function. The temperature display will cycle through activation → 35 degrees → 42 degrees → off in sequence.

 Backrest button

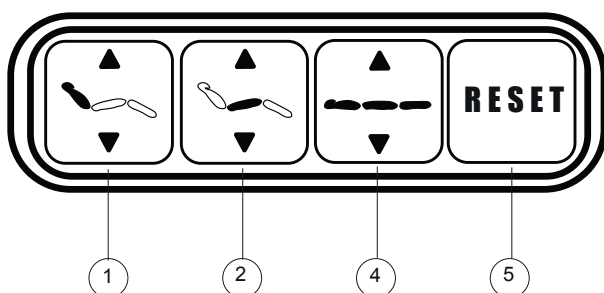

Seatrest button

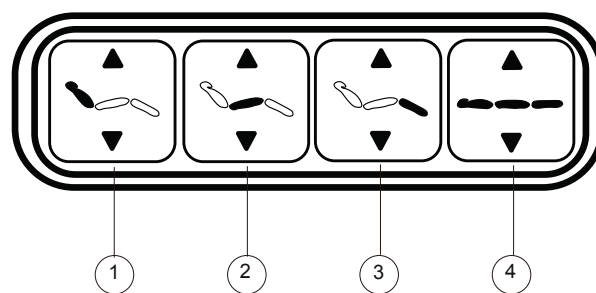 

Adjust the Bed Rotation:

To rotate the chair, pull out the adjustment handle to enable a 110-degree rotation to the left and right. - Once the desired angle is reached, push the handle back in to securely lock the bed in place.



Adjust armrests:

Move the handrail back and forth through a full 180-degree range.



6.Maintenance

1. Daily Cleaning:

- Gently wipe away dust from the product surface using a soft, dry cloth.

2. Stain Removal:

- For stubborn dirt that won't come off with a regular dry cloth, use a soft towel dampened with a diluted neutral cleaner. After cleaning, dry the area thoroughly with a clean, dry cloth.

3. Avoid Solvents:

- Refrain from using solvents such as benzene, thinners, or gasoline, as these can damage the product's leather or erode the surface of the product casing.

4. Storage and Usage Conditions:

- Keep the product out of direct sunlight and humid environments to prevent damage.
- The product is designed to operate in temperatures ranging from -5° C to +50° C and at a relative humidity of 45% to 85%.

5. Routine Maintenance:

- Regularly lubricate moving parts (annually) to ensure smooth operation and prolong the product's lifespan.

Please adhere to these maintenance tips to maintain the product's performance and appearance over time.

7.Troubleshooting

Please try the following fault diagnoses and eliminating operations if you find a fault in your using this product.

Phenomenon	Diagnosis	Eliminating Operations
Press the control key but nothing happens to the bed	1.The function of the pressed control key has been switched to the extremity; 2.Whether the power plug is properly inserted; 3. Whether all connecting plugs of the transformer are inserted properly; 4.Quality problem of manual control board.	1.Try to press other control keys; 2.Unplug the power plug and replug it; 3.Unplug and replug; 4.Replace the manual control panel.
Abnormal sound and shaking during the lifting and lowering of the chair	1.The screws are loose 2.All the rotational components are lacking of lubricating oil 3.Quality problem of motor	1.Tighten all screws 2. Add some lubricant 3.Replace the motor