

# Instructions Manual

## Beauty instrument


ST05

Sterilizer

VERSION 1.26

## Introduction:

Thank you for choosing our T05 multifunctional disinfection machine. This product is both stylish and powerful, incorporating French pasteurization principles, PTC hot air drying technology, and multi-mode disinfection using ultraviolet and ozone. It is widely used in homes, offices, hotels, the catering industry, and schools for drying and disinfecting baby and maternal products, tableware, toys, clothing, and everyday necessities. It is an essential appliance for health and hygiene.

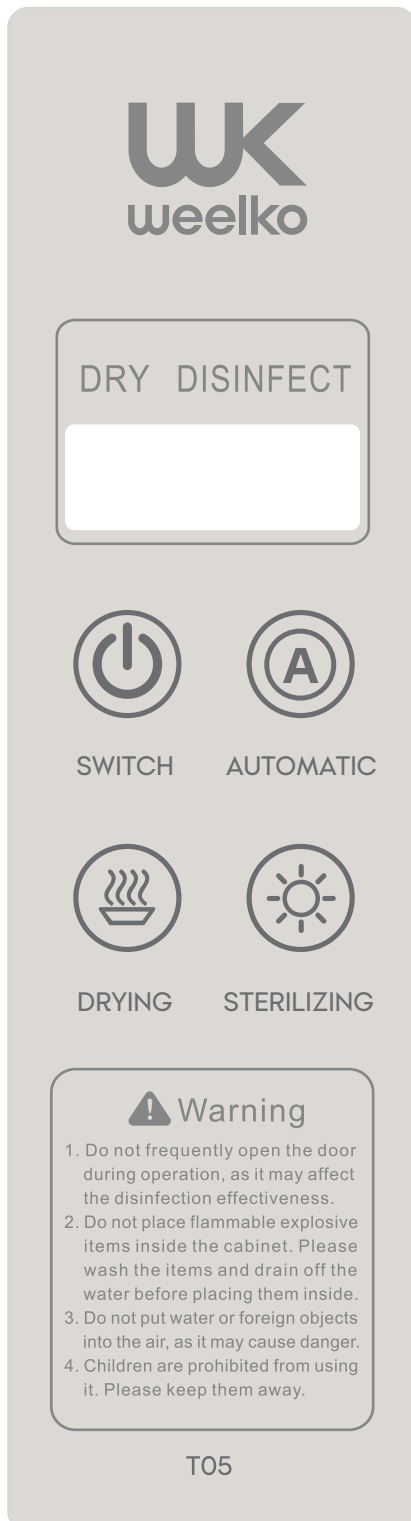

## User Instructions:

### 1. Power Button:

After connecting to power, the indicator light will blink. Press the power button once—the button panel will light up and the functions will be enabled.

### 2. Automatic Button:

·Press once: the display shows 60 minutes of drying and 15 minutes of disinfection. The machine starts automatically after 3 seconds, first drying with hot air for 60 minutes, then disinfecting with ultraviolet and ozone for 15 minutes.

·Press twice: the display shows 90 minutes of drying and 30 minutes of disinfection.

·Press three times: the display shows 30 minutes of drying and 10 minutes of disinfection.

·Press and hold for 3 seconds: the display shows "24:00" and enters the 24-hour sterile storage mode. It initially dries for 45 minutes and disinfects for 15 minutes, then every 3 hours it runs a 15-minute cycle (10 minutes drying, 5 minutes disinfection). It shuts off automatically after 24 hours.

### 3. Drying Button:

Press to choose drying time. Options include 45, 60, or 90 minutes. After selection, the machine starts after 3 seconds and shows a countdown. Press during operation to cancel.

### 4. Sterilizing Button:

Press to choose disinfection time. Options include 10, 20, or 30 min. After selection, the machine starts after 3 seconds and shows a countdown. Press during operation to cancel.

### 5. Storage Function:

Press and hold the Automatic button for 3 seconds to activate the 24-hour sterile storage mode (initially 45 min drying + 15 min disinfection, then every 3 hours: 10 min drying + 5 min disinfection).

## **Important notes:**

- As the machine is with Ozone, first time to use the cabinet, turn it on with empty loading for 30 minutes drying and 10 minutes sterilizing, then open the door for 20 minutes. It can eliminate any possible smell.
- Drain all the water from the utensils before placing them into the cabinet. To make the best sterilizing effect, do not place utensils stacked but put them vertically one by one.
- Do not touch the UV lamp while the machine is working to avoid injury.
- Avoid looking directly at the UV light during operation.
- Use the appliance on a flat, stable surface.
- Keep the machine away from water and moisture.
- Unplug the machine when not in use.
- Do not block ventilation inlets and outlets.
- Do not open the cabinet door during operating, as it will affect the sterilizing effect or lead to ultraviolet radiation burns.
- After the drying or sterilizing finished, wait for 10 minutes before opening the door, don't touch the utensils until they are cooled down to avoid affecting the sterilization effect or burning.
- Do not let Children use this cabinet or poach it.
- Do not disassemble, repairing or modify the machine yourself.

## **Maintenance:**

- Wipe the surface with a soft cloth.
- Clean the inner chamber regularly to maintain hygiene.
- Do not use corrosive or volatile cleaners.

## **Technical Specifications:**

- Model: T05
- Rated Voltage/Frequency: 220V -50Hz
- Rated Power: 160W
- Loading Weight: 2Kg
- Capacity: 12L



Imported by  
WEEKO BARCELONA SL

Pol. Ind. La Valldan  
Cami de Garreta, 92  
08600 Berga  
Barcelona - Spain  
T. +34 93 824 90 20  
E. [info@weelko.com](mailto:info@weelko.com)