


Instructions Manual


Electric Massage Bed

3897E+.4.A26

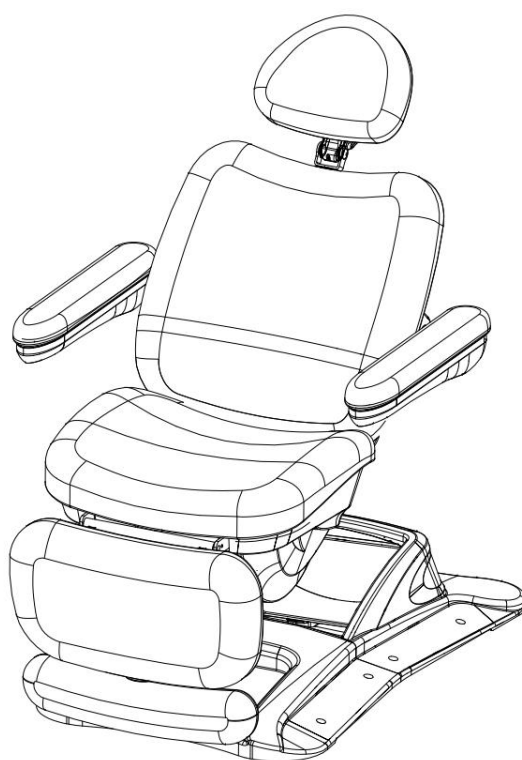

Safety instructions:


1. Please read the following instructions carefully before connecting, operating or adjusting this electric beauty bed and keep this manual safe.
2. This electric beauty bed uses a three-wire power cable, which must be inserted into a three-hole power socket with earth wire to ensure proper ground connection so that it can prevent user from getting electric shock accidentally. Meanwhile it also ensures the normal operation of the electric beauty bed.
3. All plugs, buttons, and their connecting cables must not be immersed in water or other liquids during normal use.
4. It is forbidden to put your hands, feet and head into the gap ①②③④⑤⑥⑦⑧ (see the following figure) while adjusting the height of the entire bed by pressing the buttons on hand controller or foot controller.
5. It is prohibited to use immediately when plugs, buttons and their connecting cables are broken.
6. It should be noticed that the frequency is 6 min/h when using the electric push rod of this electric beauty bed.
7. Maintenance must be carried out by trained professionals.

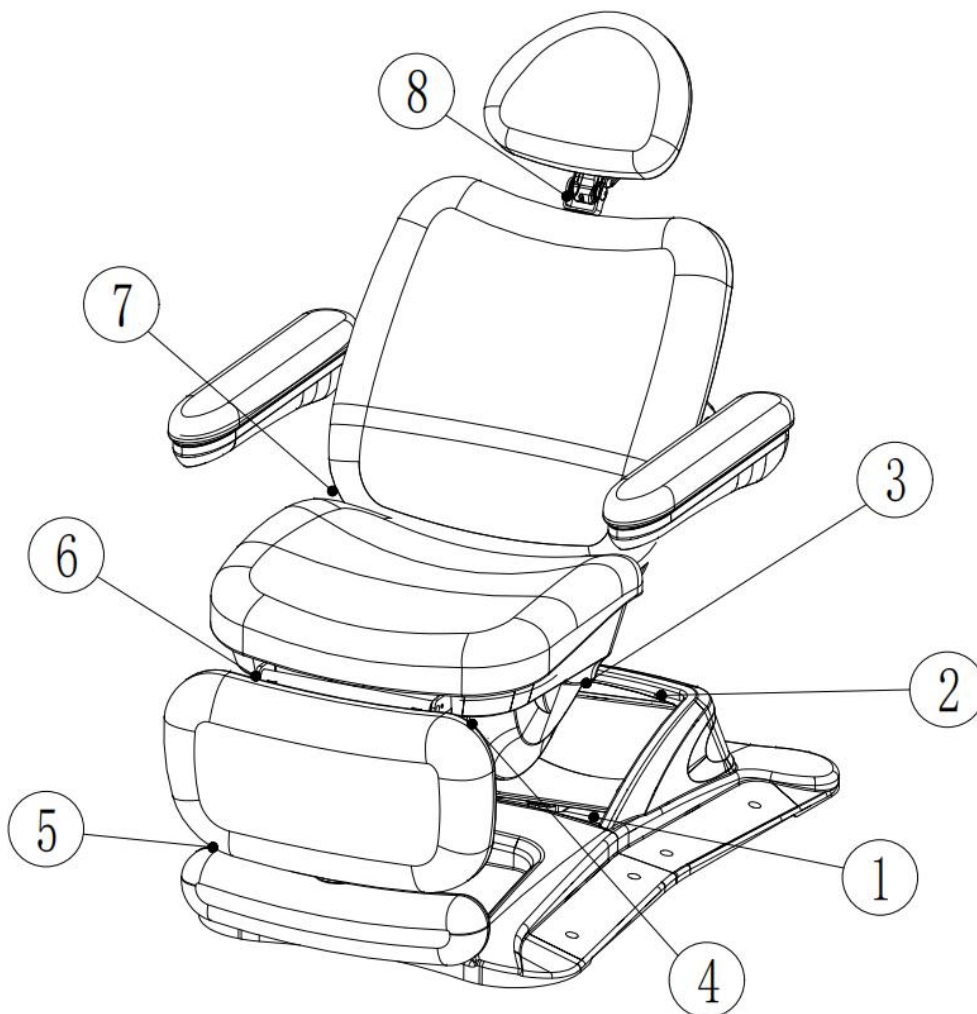

Warnings:

1. Individuals with osteoporosis or heart problems should not use this product;
2. Pregnant or menstruating women should not use this product;
3. Individuals with physical trauma or surface diseases should not use this product;
4. Children under 14 years old without any supervision and someone unconscious are prohibited from using this product;
5. Please check whether the power cord and plug are damaged or not before use. If there is any damage then it must be replaced by the agents or similar professionals;
6. Please confirm whether the voltage used accord with the safety voltage of this product or not before use as the incorrect voltage may cause damage to the product;
7. Wet hand is not allowed to plug or unplug the power plug to avoid electric shock;
8. Do not plug in before the product is installed;
9. The power cord should be put away to prevent pedestrians from tripping;
10. The appearance of the product should be cleaned by soft towel soaked with diluted neutral detergent;
11. Unplug the product when it's not used;
12. Do not disassemble the product without any authorization. Please contact the local agents for repair and maintenance.

●Technical data:

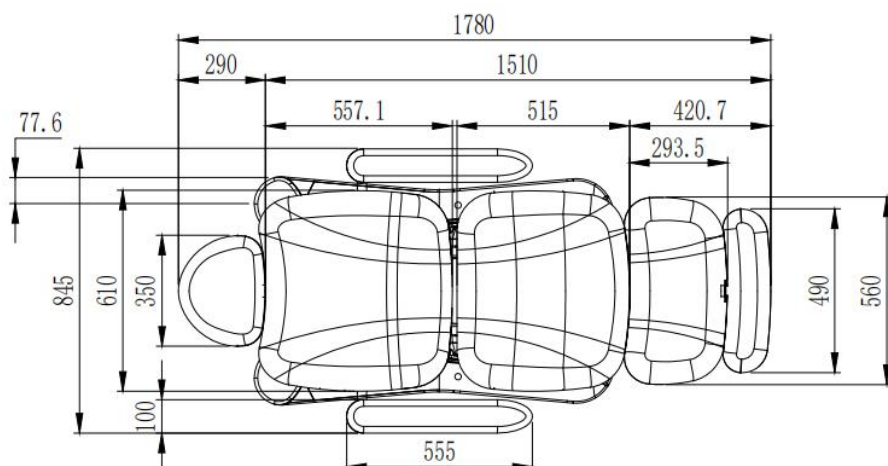

Dimension:
:1790x845x610mm

Lowest Height: 610mm

Highest Height: 910mm

Net Weight: 94kg

Gross Weight :114kg

Packaging
size:126*70*63cm

Loading Capacity: 200kg

Input Voltage:
AC 220~240, 50/60Hz



Output Voltage: DC 24V

Maximum Power: 160W




Relative Humidity:45-85%

Environment
temperature:-5°C to +50°C

Insulation class:Class II

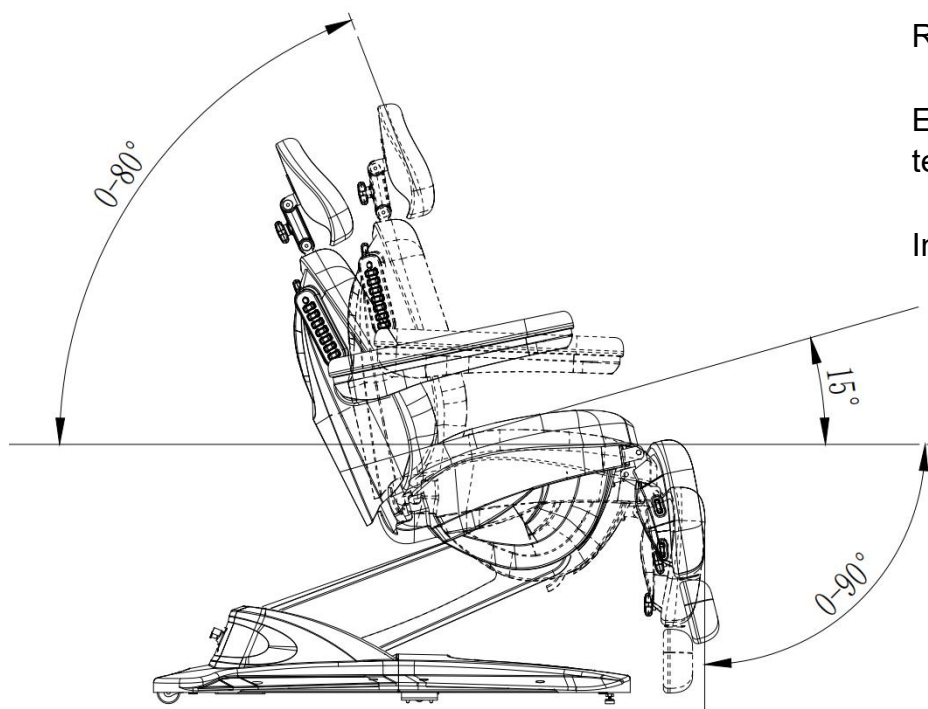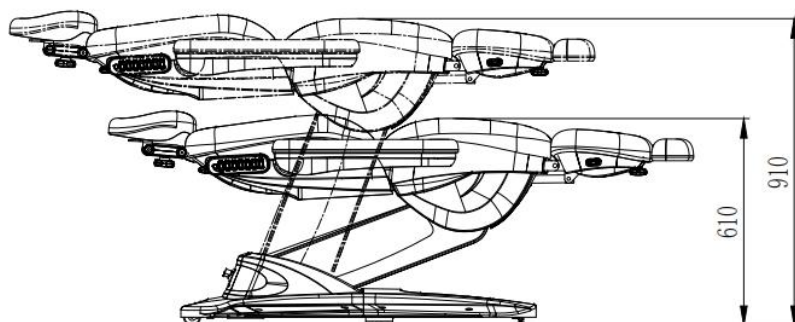


● Spare part list:

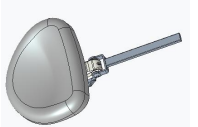Name	Pic	QTY
Left armrest		1
Right armrest		1
3872 pillow		1


● Assembly Instruction:

1. Power cord assembling: As below picture 1, plug in power cord, turn on power switch, all the buttons of foot and hand controllers will light up.
2. Armrest assembling: As below picture 2, line up and connect the left and right link of armrest and pin in the bed, then rotate 90° counter-clockwise.
3. Headrest assembling: As below picture 3, connect the headrest and bed, loose rotary knob of headrest for height adjustment.

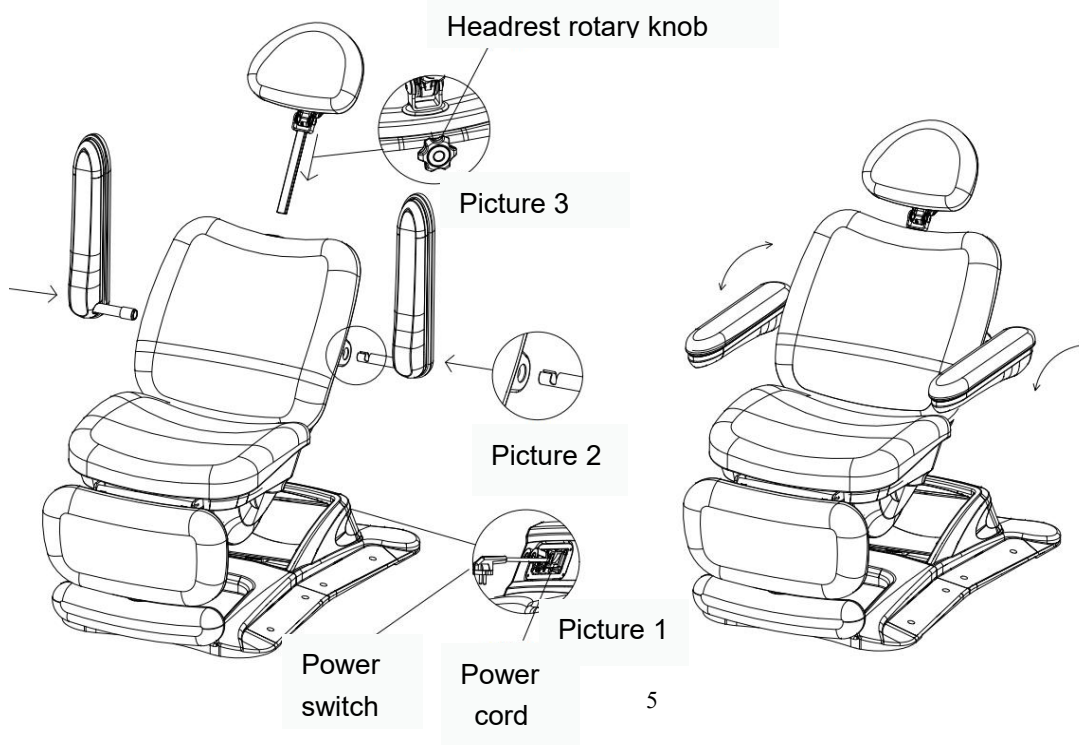

Usage Instruction For Hand Controller:

As below picture for hand controller

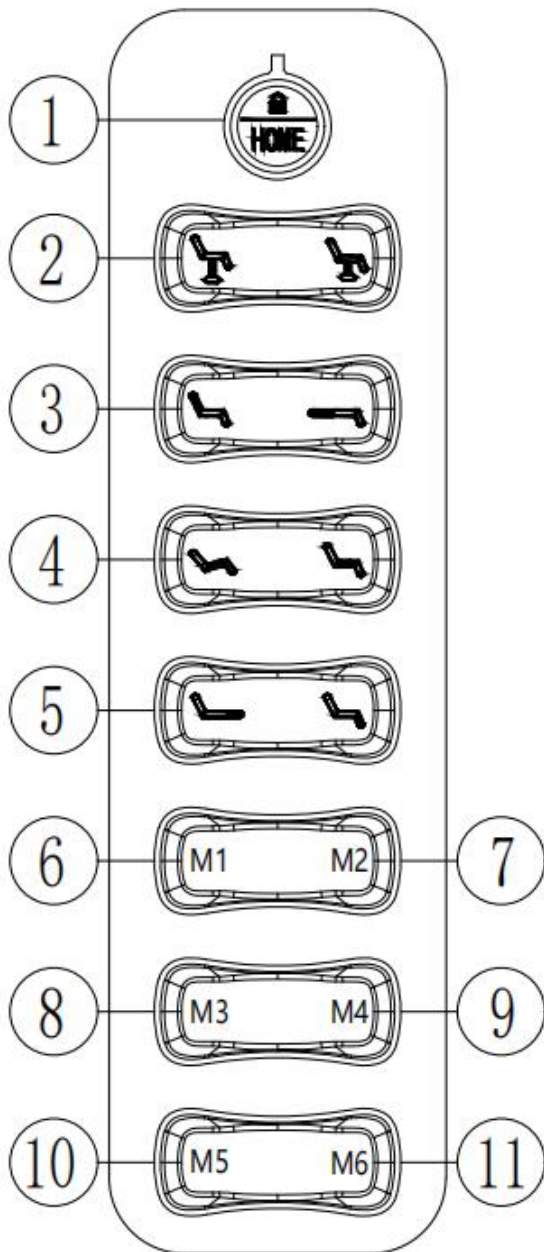

Description of the back hand controller buttons:


① Hand-operated locking key

Long press the lock button , all the functions are locked.

Then long press 3 seconds(light flash 3 times), unlock all functions.


Press , the bed goes to original position.

Show as below:

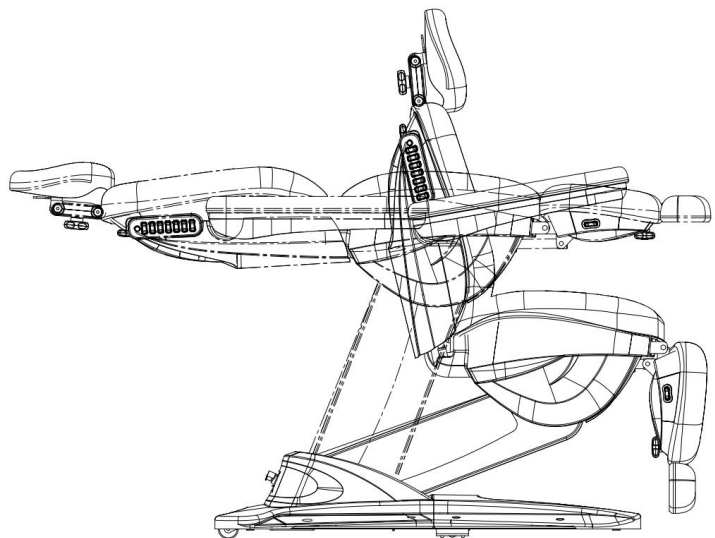


②Height Adjustment

Press  to control the overall rise or fall of the bed, as shown in the figure.

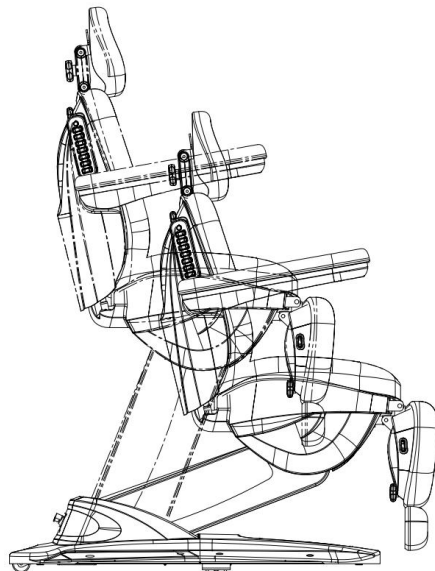


③Backrest Adjustment

Keep pressing  , the angle of inclination at which the backrest rises or falls can be adjusted, as shown in the figure


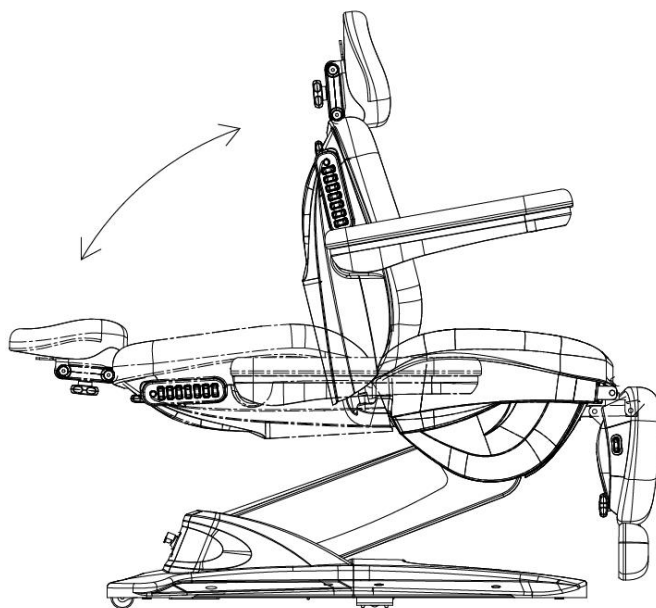



④ Overall Adjustment

Long press  to control the overall tilt angle as shown

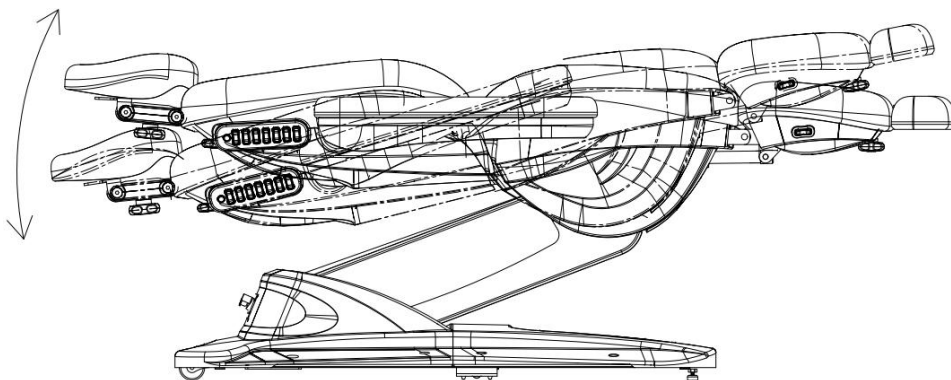

⑤ Leg Adjustment

Press  to control the leg tilt angle, or press the leg pad button  to adjust the tilt angle of the leg pad, as shown in the figure:

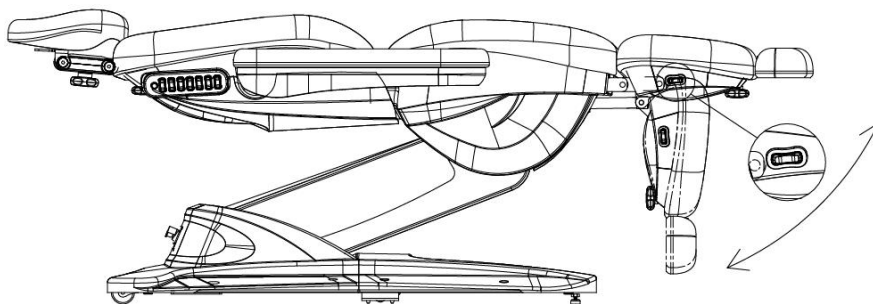


⑥ ⑦ ⑧ ⑨ ⑩ ⑪ Auto Mode Key

Press the key for the automatic mode key, press any key the bed will be automatically adjusted to the pre-set height and angle. (Setting of automatic mode: Adjust the status of lift, tilt and backrest parts, press M1,M2,M3,M4,M5,M6 to start the memory function.)


Headrest adjustment:

Loose rotary knob A to adjust the height of headrest,
unscrew rotary knob B to rotate the headrest freely and turn over angle of it, as shown in the picture:

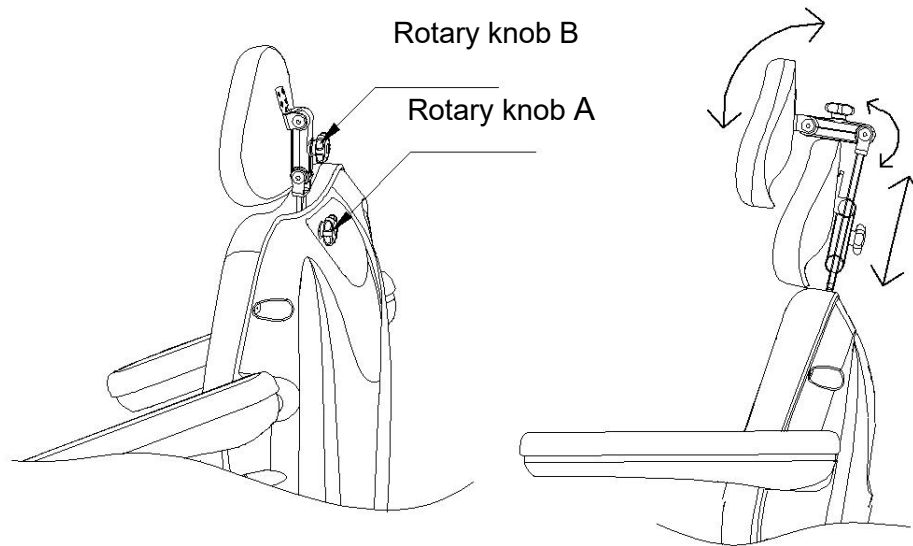


Leg cushion adjustment:

Loose rotary knob under the leg cushion to extend it, as shown in the picture:

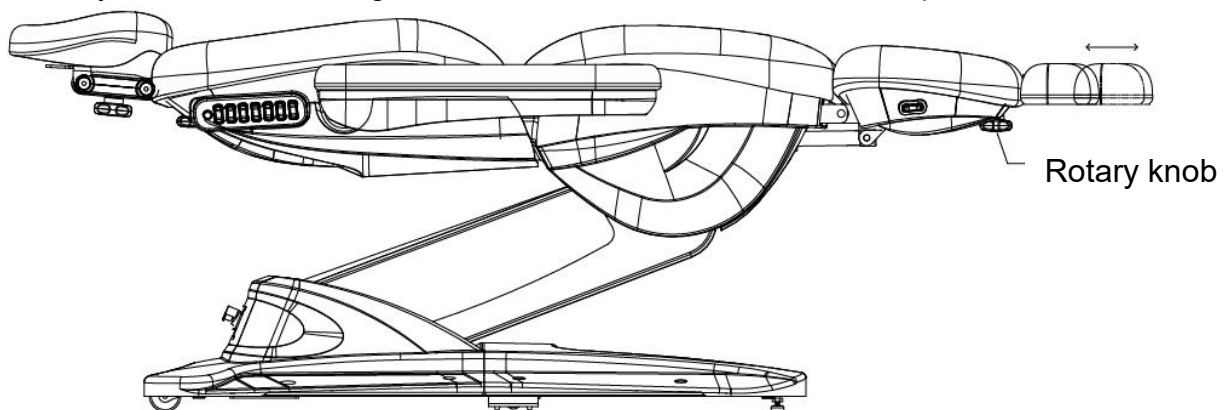


Rubber foot adjustment:

Rotate rubber foot to adjust height to keep the bed balance on uneven ground. Tighten and lock the nut after adjusting height, as shown in the picture:

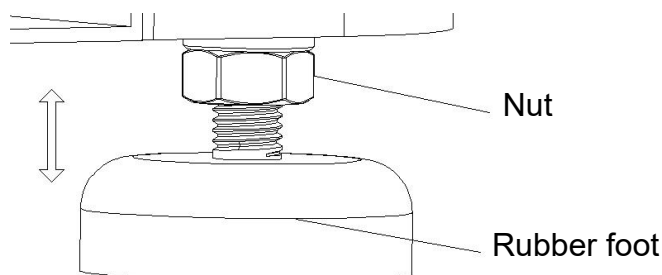

Usage of wheels:

Pull up the bed to make the wheels as fulcrum and the bed slope toward the ground, then the whole bed can be moved easily by rotating the wheels, as shown in the picture

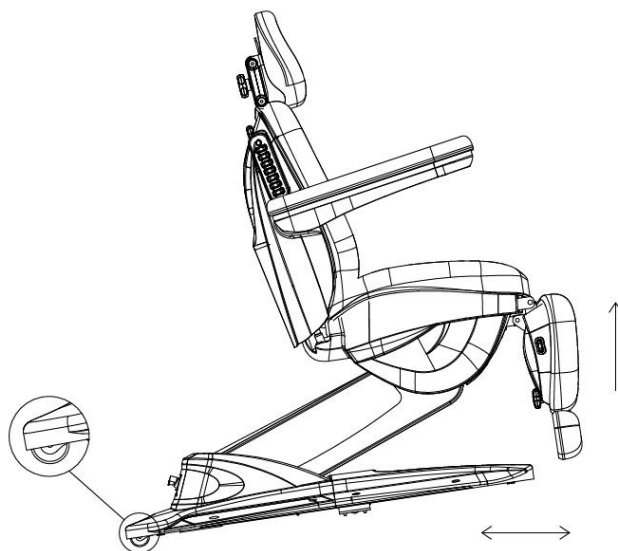

Maintenance:

1. Daily cleaning

You can wipe out the dust by using soft dry towel.

2. Remove stubborn dirt

It is hard to remove the stubborn dirt by using normal dry towel. In this case, you can use soft towel with diluted neutral detergent to clean it first and then use dry towel to wipe it.

3. It's prohibited to use benzene, diluent, gasoline or other solvent. These solvents may damage the leather or cause corrosion to the surface of this product.

4. Storage and operating environment

Don't put the product under the strong sunlight and moisture environment. Otherwise it may cause damages of the product.

5. It is allowed to use this product under the temperature from -5°C to 50°C and the

humidity from 45% to 85%.

Fault Diagnosis:

If there is something wrong when using the product, please try below operations to detect and eliminate the faults:

Phenomenon	Diagnosis	Operation of elimination
Press the buttons of foot controller but without responses	1.Check whether the controller power switch turn on or not	1.Turn on the controller switch again
	2.Check whether the foot control function has reached to maximum or not	2.Try whether other buttons workable or not
	3.Check whether the power plug is connected or not	3.Unplug the power plug and re-plug it
	4.Check whether each connecting plug of the transformer is connected or not	4.Unplug the connecting plugs and re-plug them
There is noises and shaking during lifting of the bed	Screw loosen	Tighten all the screws
Power switch light does not light up	Fuse has burned out	Replace the fuse

- ◆ It will be not informed if there is any improvement of the product that do not influence basic structure, function and appearance.



Imported by
WEELKO BARCELONA SL

Pol. Ind. La Vall dan
Camí de Garreta, 92
08600 Berga
Barcelona - Spain
T. +34 93 824 90 20
E. info@weelko.com